

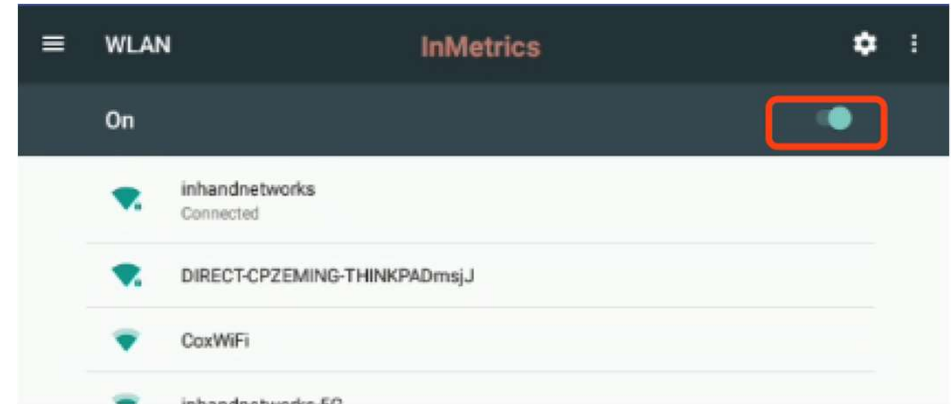
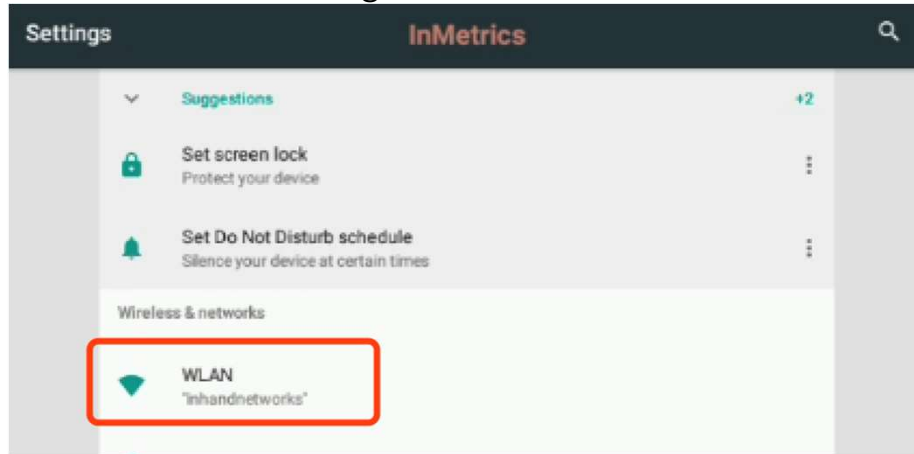


## Cast to a PC

Step 1. Connect K16 to Wi-Fi  
Settings->WLAN->Turn it on and connect to Wi-Fi.

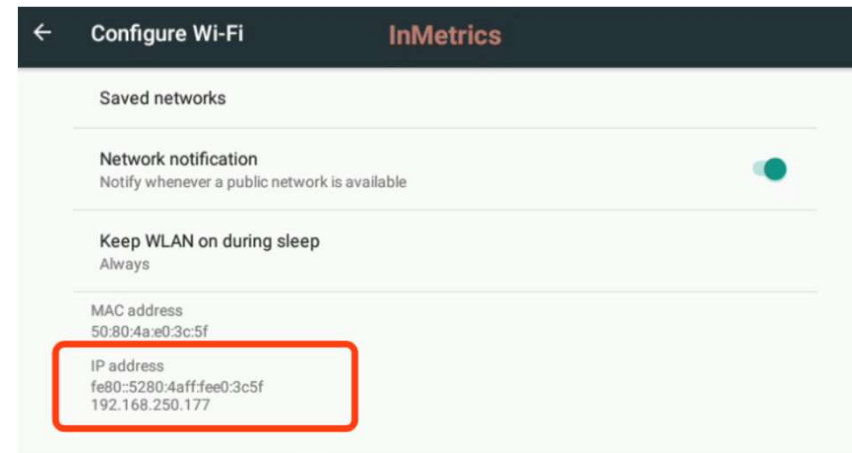


Step 2. Click the gear icon to find IP

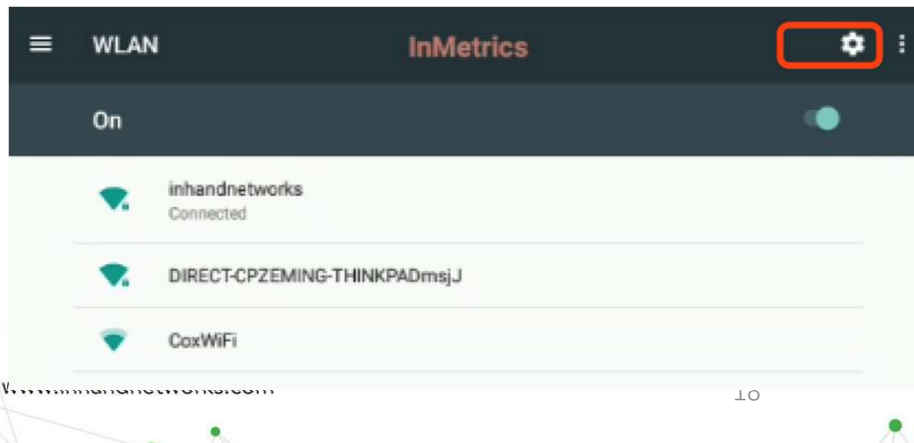


## Cast to a PC

Step 3 Download Vysor from <https://www.vysor.io/>, it works on Windows, MacOS, Linux, and Chrome.


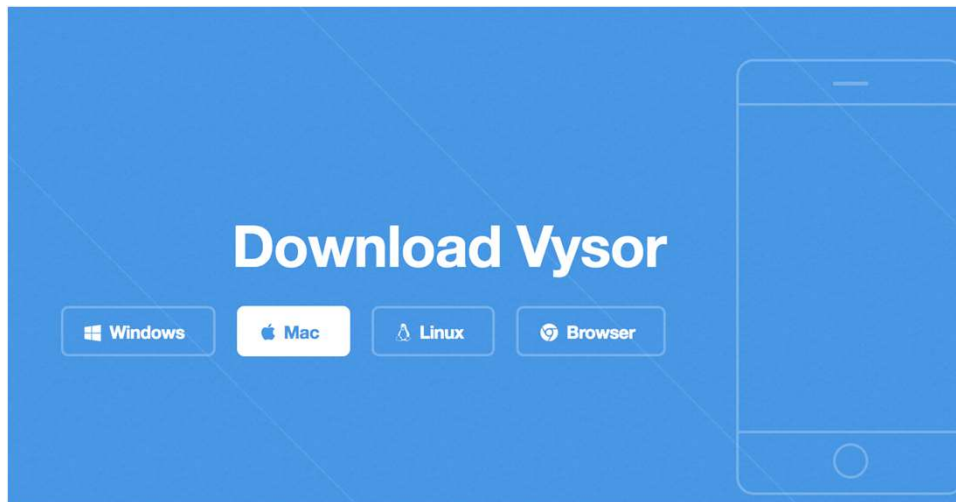


Step 4 . (Windows system only) Open Vysor and install ADB

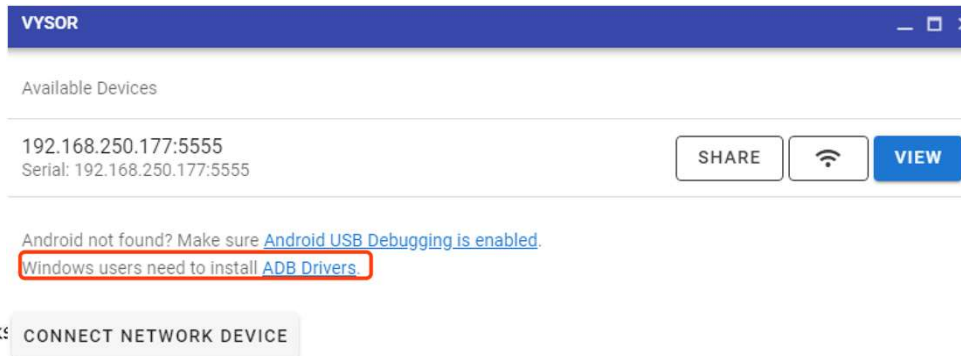

## Cast to a PC

Step 5. Connect to K16 via its IP address found in step 2.

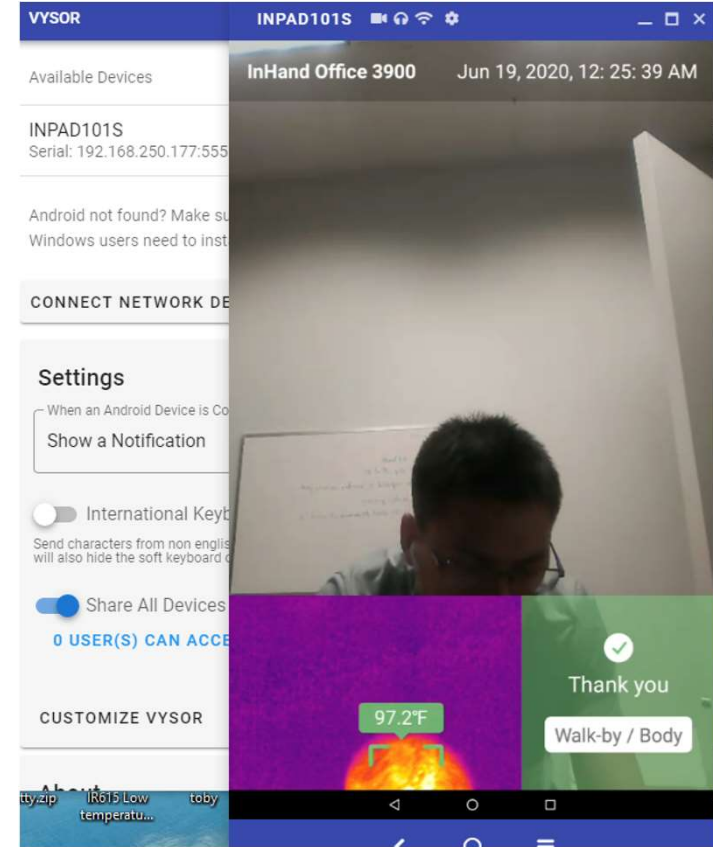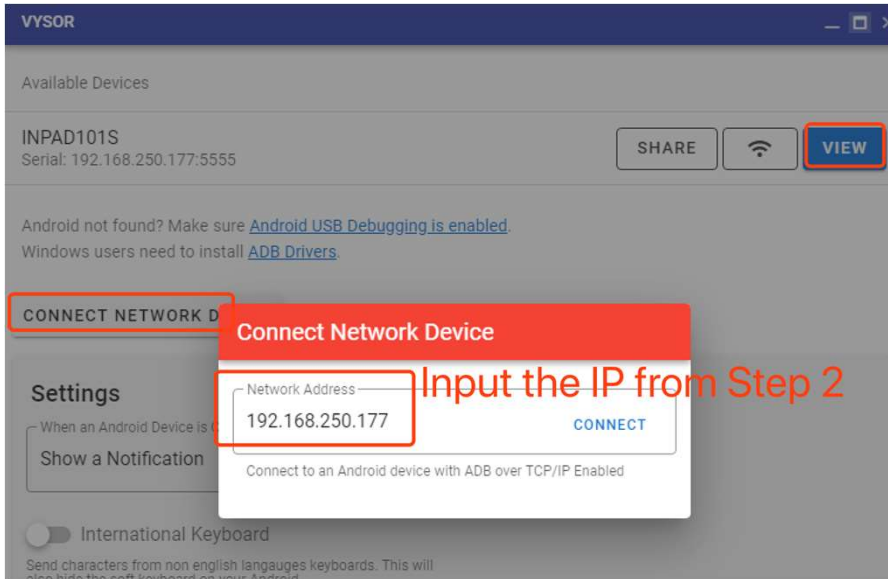

Note:

- Only one PC can connect to K16.
- PC and K16 must be on the same network and the PC can communicate with K16 (e.g. PING K16 from PC).
- When switching PC, please make sure 1<sup>st</sup> PC is disconnected (or shutdown) and **reboot** K16 before having the 2<sup>nd</sup> PC connect to K16.
- Free Vysor account is low resolution. Upgrade to pro account will get high resolution.